

# VK VL Mirror Glass Kit

## instructions v2.0

by Holdcom Auto Parts

[www.holdcom.com.au](http://www.holdcom.com.au)

### LIABILITY POLICY

We, Holdcom Auto Parts, accept absolutely zero liability for any loss and/or damage caused by using this product; whether it be used properly or improperly. This includes any damage to property; any personal loss (mental or physical); financial loss; and so on. It is up to the end-user to ensure the product is used safely and legally. The device and its features are used at the end-users own risk.

### **INSTALLATION INSTRUCTIONS:**

(Please read entirely before proceeding)

**IMPORTANT NOTE: THE LEFT SIDE AND RIGHT SIDE GLASS ARE NOT THE SAME SHAPE, SO DO NOT MIX THEM UP – THEY ARE CLEARLY MARKED LEFT AND RIGHT!**

1. Remove mirrors from vehicle.
2. To remove old glass, it must be broken into pieces.  
The easiest way to remove is by using an Automatic Centre Punch tool:  
(not included)




Glass will go everywhere, so do it into a bin or container

**PLEASE, do this step OUTSIDE and WEAR EYE PROTECTION !**



3. Use one tube of glue per mirror to secure the new “glass” into place. Apply 2-4 spots approximately 1cm round onto the plastic housing that holds the glass. Ensure to avoid areas where it may cause issues with movement and do not put too close to the edge.

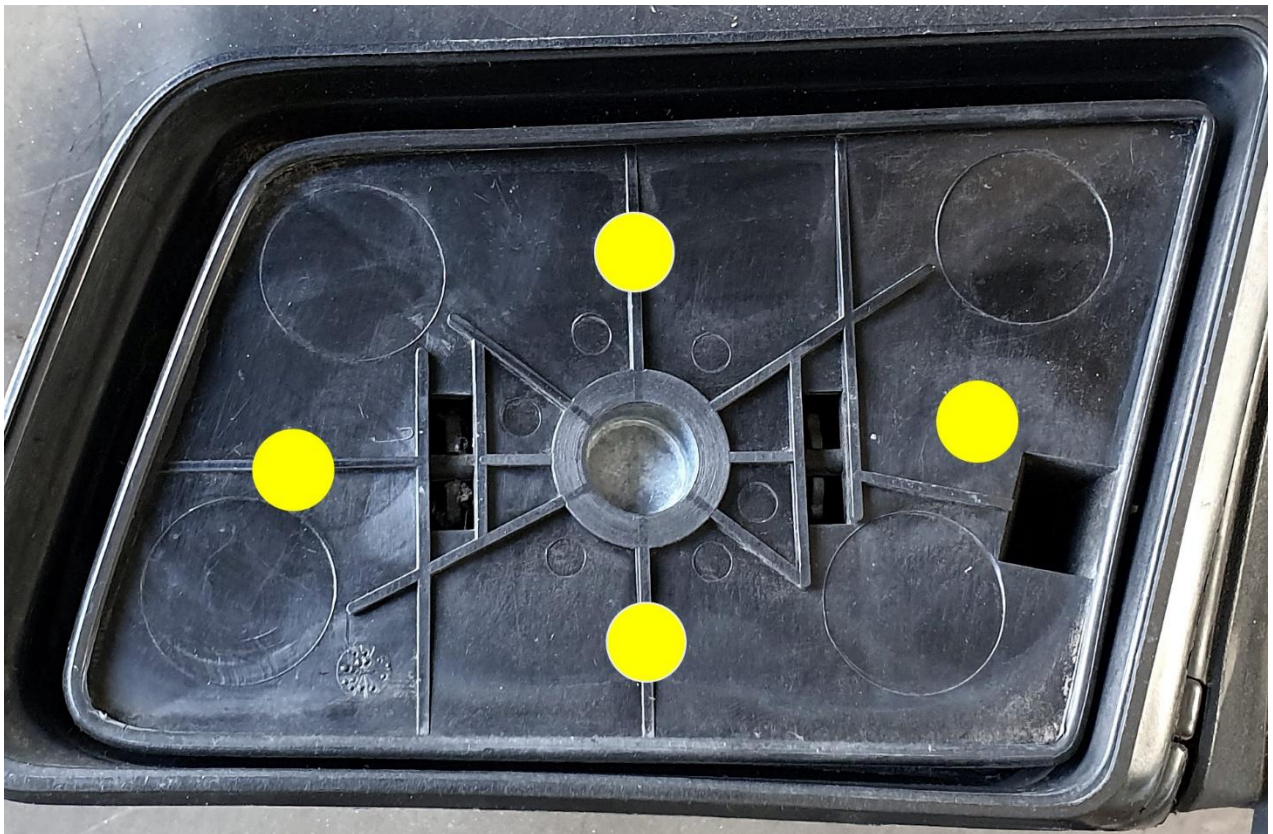

4. To fit the new glass - insert the sharp corner first (1), then snap corner (2) next. Final step is to push corners (3) and (4) down. **Be VERY CAREFUL, the glass will break if too much pressure is applied.**



5. Before the glue sets, the glass position can be slightly adjusted for best looks.
6. Before re-fitting mirrors to vehicle, we recommend to leave them sitting indoors facing upwards overnight to let the glue cure 100%.
7. Once done, refit mirrors to vehicle and clean the glass.

